

/ STAGE, STADIUM & X-TREMESHOT.



DISCLAIMER

⚠ WARNING

Read this manual carefully before installing and/or using this product. Failure to read the manual and to follow the printed instructions may lead to personal injury and/or damage to the product.

© 2017 MAGICFX®

All rights reserved.

Nothing from this publication may be copied, reproduced and/or published by means of printing, photocopying or by any other means, without the prior written approval of MAGIC FX.

MAGIC FX reserves the right to modify specifications stated in this manual.

TRADEMARKS

Any brand names mentioned in this manual are registered trademarks of their respective owners.

LIABILITY

MAGIC FX accepts no liability for claims from third parties arising from unauthorised use, use other than that stated in this manual, and use other than in accordance with the General Conditions registered at the Chamber of Commerce.

Refer further to the General Conditions. These are available on request, free of charge.

Although considerable care has been taken to ensure a correct and suitably comprehensive description of all relevant components, the manual may nonetheless contain errors and inaccuracies.

Should you detect any errors or inaccuracies in the manual, we would be grateful if you would inform us. This helps us to further improve our documentation.

TABLE OF CONTENTS




| | |
|--|-----------|
| Disclaimer | 2 |
| Trademarks | 2 |
| Liability | 2 |
| Foreword | 4 |
| Language | 4 |
| Revision table | 4 |
| 1 Meet the MAGICFX® STAGESHOT II, STADIUMSHOT II & X-TREMESHOT! | 5 |
| 1.1 Main parts | 5 |
| 1.2 MAGICFX® STAGESHOT II | 6 |
| 1.3 MAGICFX® STADIUMSHOT II | 7 |
| 1.4 MAGICFX® X-TREMESHOT | 8 |
| 2 Shoot safely! | 10 |
| 2.1 General safety rules | 10 |
| 2.2 Transport | 10 |
| 2.3 Compressed air | 10 |
| 2.4 Rigging | 10 |
| 2.5 Noise level | 11 |
| 2.6 Safety symbols | 11 |
| 2.7 Precautions for operation | 11 |
| 3 Let's shoot! | 12 |
| 3.1 Install the machine | 12 |
| 3.2 Connect power | 16 |
| 3.3 Run a test | 17 |
| 3.4 Fill with confetti and/or streamers | 18 |
| 3.5 Fill with pressurized air | 19 |
| 3.6 Let's shoot! | 20 |
| 3.7 Clean up | 20 |
| 4 Maintenance | 23 |
| 5 Troubleshooting | 23 |
| 6 Correct disposal | 23 |
| 7 EC Declaration of Conformity | 24 |

FOREWORD

Congratulations! You have bought a great new product from MAGIC FX.

This manual contains all information required for the intended use of the equipment. Deviation from the described intended use can result in a hazardous situation and/or property damage.

This manual includes notes and warnings on safe operation of the equipment. These notes and warnings are accompanied by the following icons. Read them attentively!

| | |
|--|---|
|  DANGER | Indicates a hazardous situation that, if not avoided, will result in death or serious injury. This signal word is to be limited to the most extreme situations. |
|  WARNING | Indicates a hazardous situation that, if not avoided, could result in death or serious injury. |
|  CAUTION | Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury. |
| NOTICE | Indicates information considered important, but not hazard-related (e.g. messages relating to property damage). |

LANGUAGE

This document contains the original instructions in English. In case you require other languages please contact MAGIX FX.

REVISION TABLE

| Document nr | Revision | Date | Description | Authored by | Checked by |
|-------------|----------|------------|------------------|-------------|------------|
| PART01339 | 01-00 | 29-08-2017 | Initial release | TFR | TVA |
| PART01339 | 01-01 | 17-09-2018 | Textual revision | TVA | TVA |

1 MEET THE MAGICFX® STAGESHOT II, STADIUMSHOT II & X-TREMESHOT!

The MAGICFX® STAGESHOT II is a special effects machine that shoots confetti loads up to 1 kg 10 meters far* and 12 polybags of streamers 20 meters far*. The MAGICFX® STAGESHOT II is equipped with a 17,7 liter air pressure tank and is intended for outdoor use.


The MAGICFX® STADIUMSHOT II is a special effects machine that shoots confetti loads up to 4 kg 20 meters far* and 8-25 polybags of streamers 25-40 meters far*. The MAGICFX® STADIUMSHOT II is equipped with a 36 liter air pressure tank and is intended for outdoor use.

The MAGICFX® X-TREMESHOT is a special effects machine that shoots confetti loads up to 8 kg 30 meters far* and 15-25 polybags of streamers 25-40 meters far*. The MAGICFX® X-TREMESHOT is equipped with a 68 liter air pressure tank and is intended for outdoor use.

In this manual the MAGICFX® STAGESHOT II, STADIUMSHOT II & X-TREMESHOT are all referred to as 'the machine'.

* The output distance depends on input material and load.

1.1 MAIN PARTS

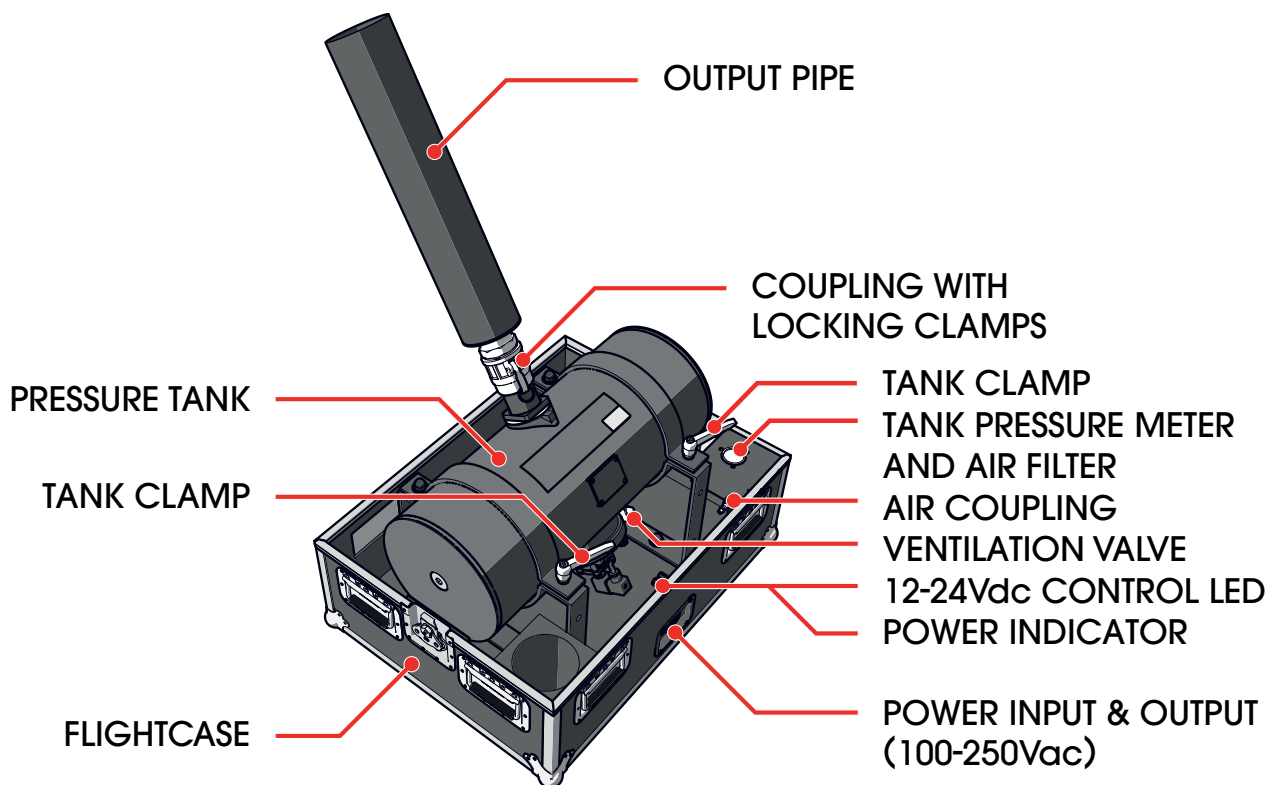

Main parts


1.2 MAGICFX® STAGESHOT II

TECHNICAL DATA

| | | | |
|------------------------|-----------------------------|------------------------------------|-------|
| Product | Product Name | MAGICFX® STAGESHOT II | |
| | Product Code | MFX0410II | |
| | Product Type | CONFETTI & STREAMER FX | |
| Main Dimensions | Length (mm/in) | 590 | 23,2 |
| | Width (mm/in) | 450 | 17,7 |
| | Height (mm/in) | 750 | 29,5 |
| Weight | Empty weight (kg/lb) | 71 | 156,5 |
| Environment | Minimum Temperature (°C/°F) | -10 | 14 |
| | Maximum Temperature (°C/°F) | 70 | 158 |
| | Humidity (Relative) | 20% to 90% (non condensing) | |
| Electrical | Voltage Input (Vac) | 100-250Vac | |
| | Voltage Frequency | 50-60Hz | |
| | Power Consumption (Vac) | 20W | |
| | Power Connector (Vac) | Neutrik® powerCON TRUE1 (in & out) | |
| | Voltage Input (Vdc) | 12-24Vdc | |
| | Power Connector (Vdc) | Banana Plug & Wire | |
| Pressure Tank | Maximum Pressure (Bar/Psi) | 8 | 116 |
| | Volume (L) | 17,7 | |
| Usage | Consumable(s) | Confetti & Streamers | |

Technical data of the MAGICFX® STAGESHOT II

PRODUCT IDENTIFICATION

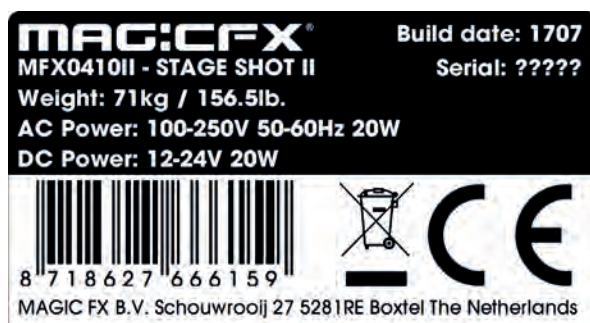

Type plate of the MAGICFX® STAGESHOT II

ACCESSORIES

| Code | Product |
|-----------|--|
| MFX0404 | Compression caps tape 50m X 50mm |
| MFX0415 | Cover for the MAGICFX® STAGESHOT II |
| MFX0413 | 25 caps + 25 cores for the MAGICFX® STAGESHOT II |
| MFX0406II | Flexible air hose 5m II |
| MFX0405 | Air Compressor 8L / 8Bar |

Accessories of the MAGICFX® STAGESHOT II

INPUT & OUTPUT

The output pipe has a capacity of 15 liters and can be filled with confetti or streamers. The maximum load per blast depends on the type of input material. The output distance depends on the type of input material and the load. The output has a maximum distance of 25 m.

NOTICE

Wind and other weather circumstances will influence the output distance. The given values are estimated values.


1.3 MAGICFX® STADIUMSHOT II

TECHNICAL DATA

| | | | |
|------------------------|-----------------------------|------------------------------------|-------|
| Product | Product Name | MAGICFX® STADIUMSHOT II | |
| | Product Code | MFX0401II | |
| | Product Type | CONFETTI & STREAMER FX | |
| Main Dimensions | Length (mm/in) | 800 | 31,5 |
| | Width (mm/in) | 600 | 23,6 |
| | Height (mm/in) | 750 | 29,5 |
| Weight | Empty weight (kg/lb) | 110 | 242,5 |
| Environment | Minimum Temperature (°C/°F) | -10 | 14 |
| | Maximum Temperature (°C/°F) | 70 | 158 |
| | Humidity (Relative) | 20% to 90% (non condensing) | |
| Electrical | Voltage Input (Vac) | 100-250Vac | |
| | Voltage Frequency | 50-60Hz | |
| | Power Consumption (Vac) | 20W | |
| | Power Connector (Vac) | Neutrik® powerCON TRUE1 (in & out) | |
| | Voltage Input (Vdc) | 12-24Vdc | |
| | Power Connector (Vdc) | Banana Plug & Wire | |
| Pressure Tank | Maximum Pressure (Bar/Psi) | 8 | 116 |
| | Volume (L) | 36 | |
| Usage | Consumable(s) | Confetti & Streamers | |

Technical data of the MAGICFX® STADIUMSHOT II

PRODUCT IDENTIFICATION

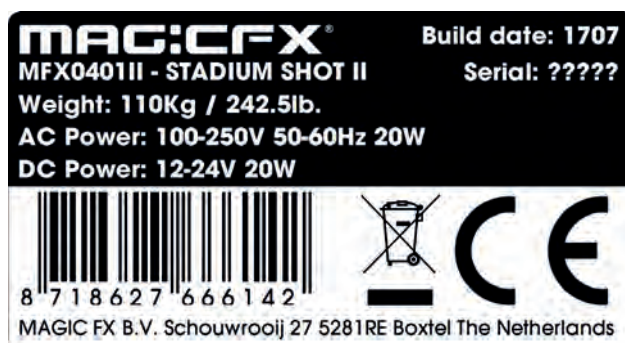

Type plate of the MAGICFX® STADIUMSHOT II

ACCESSORIES

| Code | Product |
|-----------|--|
| MFX0404 | Compression caps tape 50m X 50mm |
| MFX0416 | Cover for the MAGICFX® STADIUMSHOT II |
| MFX0407 | 25 caps + 25 cores for the MAGICFX® STADIUMSHOT II |
| MFX0406II | Flexible air hose 5m II |
| MFX0405 | Air Compressor 8L / 8Bar |

Accessories of the MAGICFX® STADIUMSHOT II

INPUT & OUTPUT

The output distance depends on the type of input material. The maximum load per blast also depends on the type of input material. Check the following table.

| Input | Max. load per shot | Output distance |
|------------------------------------|--------------------|-----------------|
| Confetti | 2 - 3 kg | 20 m |
| Streamers 10 m x 1,5 cm | 25 polybags | 35 m |
| Streamers 10 m x 5,0 cm | 12 polybags | 35 m |
| Stadium Streamers 20 m x 5,0 cm | 8 polybags | 40 m |

Input types and related loads and output distance of the MAGICFX® STADIUMSHOT II

NOTICE

Wind and other weather circumstances will influence the output distance. The given values are estimated values.

1.4 MAGICFX® X-TREMESHOT


TECHNICAL DATA

| | | | |
|------------------------|-----------------------------|------------------------------------|-------|
| Product | Product Name | MAGICFX® X-TREMESHOT | |
| | Product Code | MFX0414 | |
| | Product Type | CONFETTI & STREAMER FX | |
| Main Dimensions | Length (mm/in) | 970 | 38,2 |
| | Width (mm/in) | 700 | 27,6 |
| | Height (mm/in) | 1040 | 40,9 |
| Weight | Empty weight (kg/lb) | 160 | 352,7 |
| Environment | Minimum Temperature (°C/°F) | -10 | 14 |
| | Maximum Temperature (°C/°F) | 70 | 158 |
| | Humidity (Relative) | 20% to 90% (non condensing) | |
| Electrical | Voltage Input (Vac) | 100-250Vac | |
| | Voltage Frequency | 50-60Hz | |
| | Power Consumption (Vac) | 20W | |
| | Power Connector (Vac) | Neutrik® powerCON TRUE1 (in & out) | |
| | Voltage Input (Vdc) | 12-24Vdc | |
| | Power Connector (Vdc) | Banana Plug & Wire | |

| | | | |
|----------------------|----------------------------|----------------------|-----|
| Pressure Tank | Maximum Pressure (Bar/Psi) | 8 | 116 |
| | Volume (L) | 68 | |
| Usage | Consumable(s) | Confetti & Streamers | |

Technical data of the MAGICFX® X-TREMESHOT

PRODUCT IDENTIFICATION

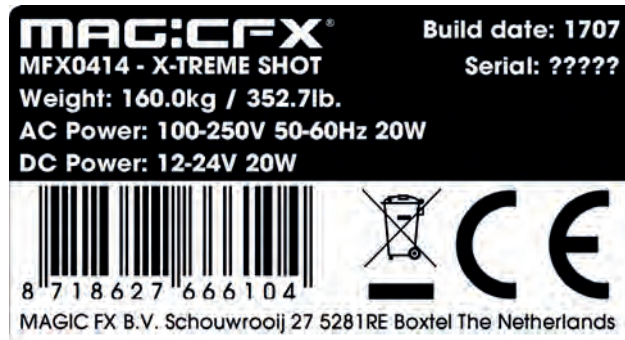

Type plate of the MAGICFX® X-TREMESHOT

ACCESSORIES

| Code | Product |
|-----------|---|
| MFX0404 | Compression caps tape 50m X 50mm |
| MFX0417 | Cover for the MAGICFX® X-TREMESHOT |
| MFX0411 | 25 caps + 25 cores for the MAGICFX® X-TREMESHOT |
| MFX0406II | Flexible air hose 5m II |
| MFX0405 | Air Compressor 8L / 8Bar |

Accessories of the MAGICFX® EXTREME SHOT

INPUT & OUTPUT

The output distance depends on the type of input material. The maximum load per blast also depends on the type of input material. Check the following table.

| Input | Max. load per shot | Output distance |
|------------------------------------|--------------------|-----------------|
| Confetti | 4 - 6 kg | 20 m |
| Streamers 10 m x 5,0 cm | 25 polybags | 35 m |
| Streamers 20 m x 2,5 cm | 30 polybags | 35 m |
| Stadium Streamers 20 m x 5,0 cm | 15 polybags | 50 m |

Input types and related loads and output distance of the MAGICFX® EXTREME SHOT

NOTICE

Wind and other weather circumstances will influence the output distance. The given values are estimated values.

2 SHOOT SAFELY!

The machine has been designed and constructed in such a manner that they can be used safely. This applies to the use, the circumstances and the regulations as described in this documentation. Reading this documentation and following the instructions are therefore necessary for everyone who is authorised to work with the machine.

The machine must be placed and used in surroundings that preferably:

- Have a reasonably stable temperature of between -10 and 70°C.
- Have a relative humidity degree of no more than 75%.
- Are reasonably free of dust, corrosive gases and high concentrations of organic vapours.
- Are not situated in the vicinity of a source of vibration.

2.1 GENERAL SAFETY RULES

- Only authorised persons may carry out work with the machine
- Do not use the machine if there are people or animals within the direct output.
- Make sure that children, unauthorised people and animals do not obtain access to the machine.
- Make sure there are no freestanding objects or objects that can be damaged by the machine within the output distance.
- Do not connect more units to a single electrical circuit than the installed fuse is able to handle. (Calculate the summed load with the electrical data from Chapter 1)
- Do not take hold of the machine while it is working or switched on.
- Do not remove any safeguards, safety caps and safety symbols.
- All required safety devices must be in good condition and function properly.
- Ensure sufficient lighting of the surroundings.
- Keep the workplace clean.

2.2 TRANSPORT

- Check the pressure level on the tank pressure meter before every transport. If necessary depressurize the system by opening the ventilation valve.
- Never transport the machine with the system pressurized!

2.3 COMPRESSED AIR

- Always use an inspected and certified professional compressor with an air output of maximum 8 bar to fill the tank. Carefully read the manual of the compressor before use.
- Never leave the tank pressurized for more than 15 minutes.
- The machine is equipped with a pressure relief valve that automatically depressurizes the system when the maximum allowed pressure of 8 bar is exceeded. Nevertheless regularly check the tank pressure meter to make sure the pressure in the tank is stable and does not exceed 8 bar. If necessary depressurize the system by opening the ventilation valve.

2.4 RIGGING



Please follow the European and national guidelines for safe rigging and trussing.

2.5 NOISE LEVEL

The environmental noise level as measured at the ear is greater than 70 dB(A). This level of noise is only reached during the short instances that the output is active. Always wear hearing protection when you are within 5 meters of the machine during operation.

2.6 SAFETY SYMBOLS

The following safety symbols are present on the machine.

| Symbol | Meaning |
|---|---------------------------------------|
|  | Read the manual carefully before use! |
|  | Wear certified ear protection! |

Safety symbols


2.7 PRECAUTIONS FOR OPERATION

| | |
|------------------|---|
| ⚠ WARNING | Using a damaged or an improper installed machine can lead to death, serious injury or property damage. Always inspect the machine thoroughly before operation. |
| ⚠ WARNING | Unauthorized operation of the machine can lead to death, serious injury or property damage. Never leave the machine and the power switch unattended when the machine is ready for use. |
| ⚠ WARNING | Missing or obscured safety symbols on the machine can lead to death, serious injury or property damage. Make sure all safety symbols are correctly in place and visible, see Section 2.6. |
| ⚠ CAUTION | Always install the output pipe before operating the machine. |


3 LET'S SHOOT!

3.1 INSTALL THE MACHINE


- 1 Bring the cased machine to the desired location.

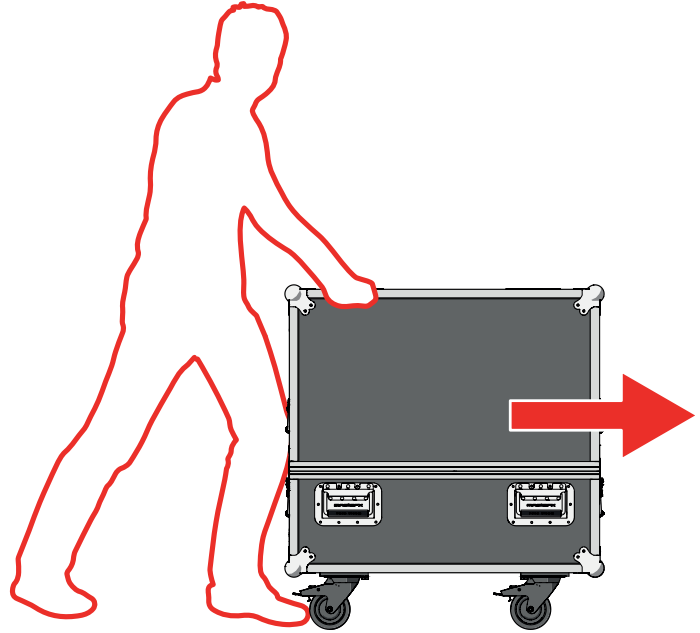


- 2 Unlock and remove the top cover.

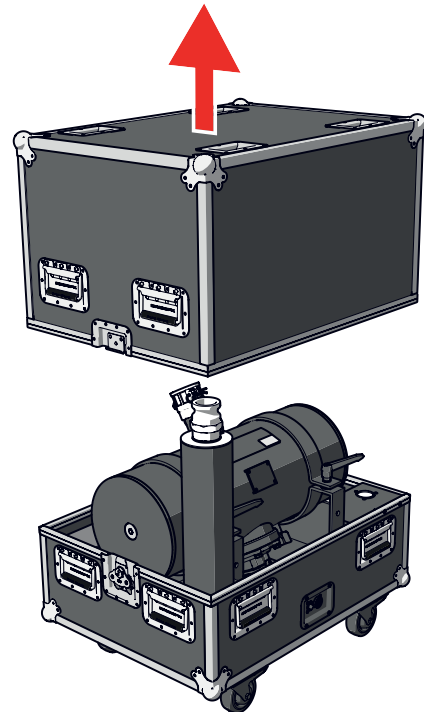


-
- 3** Remove the output pipe.

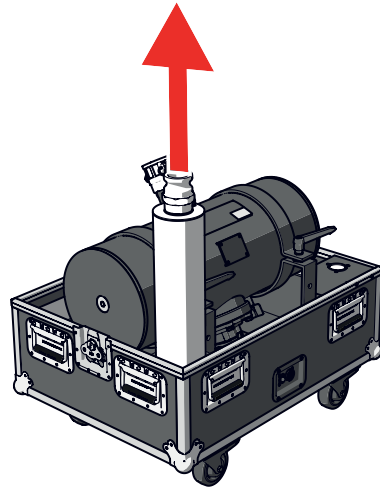


-
- 4** Pull the locking clamps downwards to unlock and rotate them upwards.

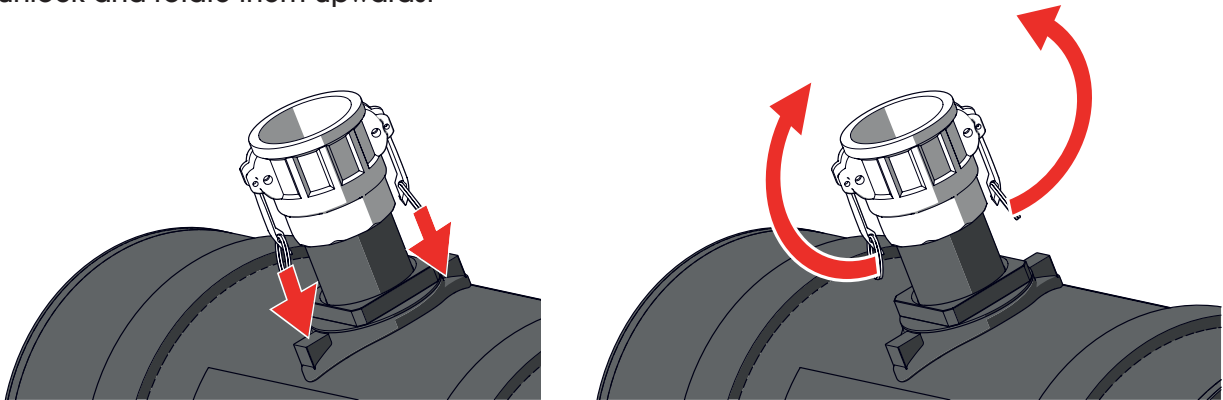

-
- 5** Place the output pipe in the coupling while holding the locking clamps upwards.

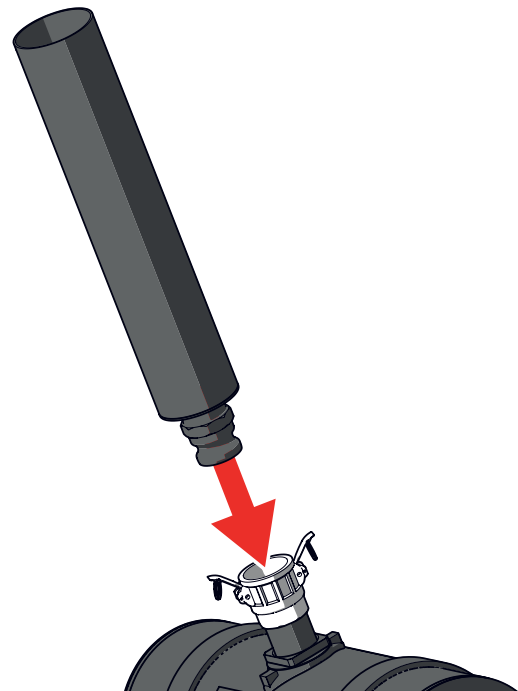


-
- 6** Lock the output pipe in place with the locking clamps.

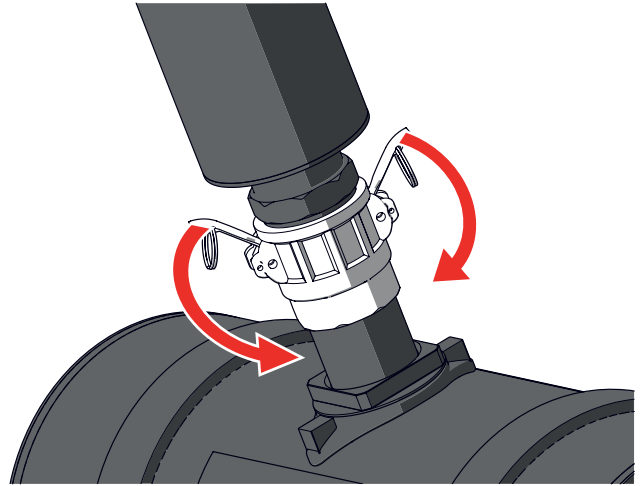


-
- 7** Pull the clamps outwards to check if the locking pins are properly locked in place.

If not: remove the output pipe and repeat step 5 and 6.


Never use the machine when the clamps are not working properly.

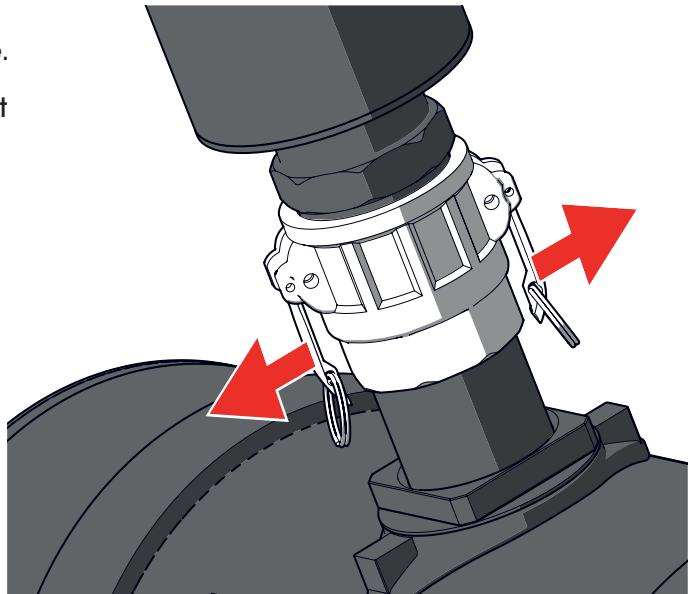


-
- 8** Turn the tank clamps counterclockwise.

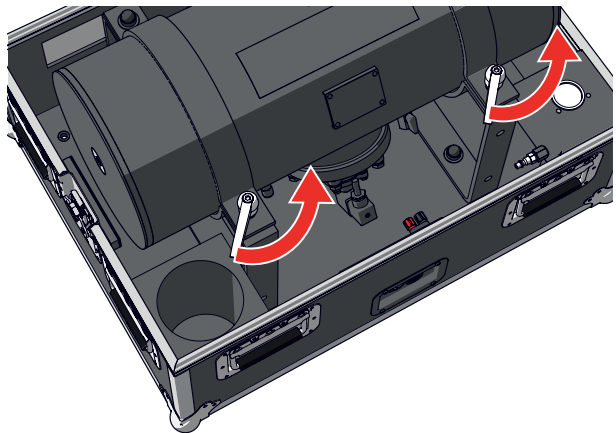


-
- 9** Set the tank with attached output pipe in an angle between 0 and 90 degrees.

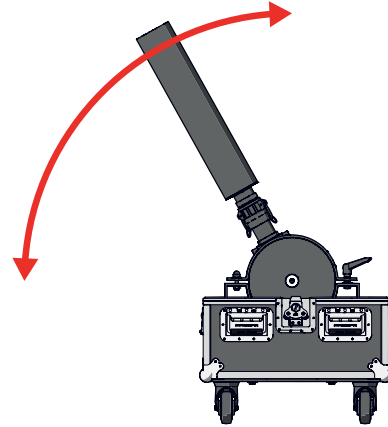


-
- 10** Turn the tank clamps clockwise to firmly secure the tank in position.

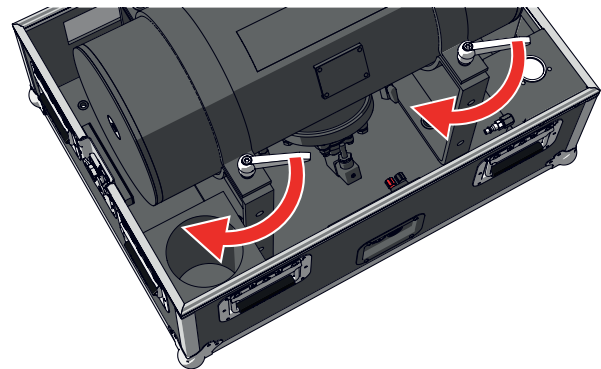

-
- 11** Place the machine in its final position and set the brakes.

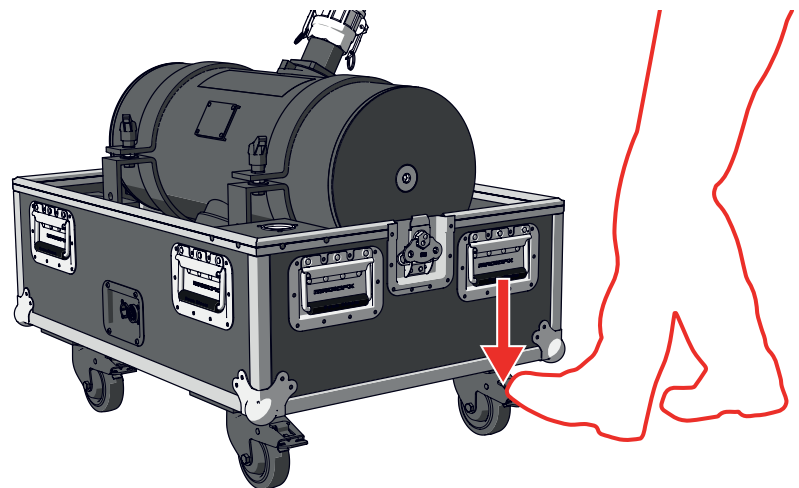


-
- 12** 1. Create a safety zone of 2 m around the machine.
2. Make sure that the direct output will be free from persons, animals and objects.

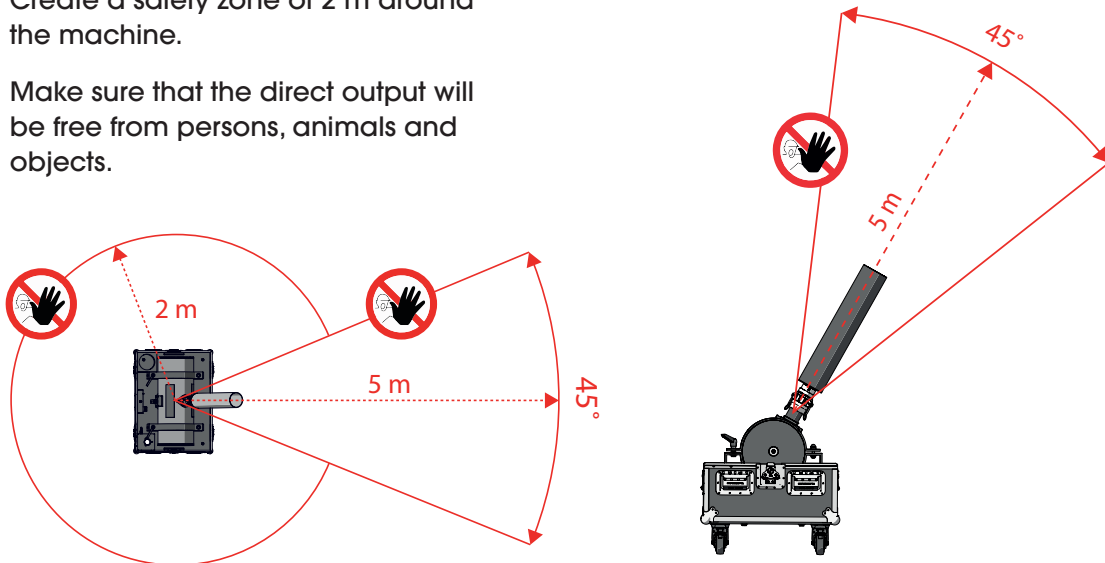


3.2 CONNECT POWER

- 1** Make sure that the power output on your controller or power switch is disabled.
-
- 2** Connect power cable(s) to the 12-24Vdc input or the 100-250Vac input.
-


12-24Vdc

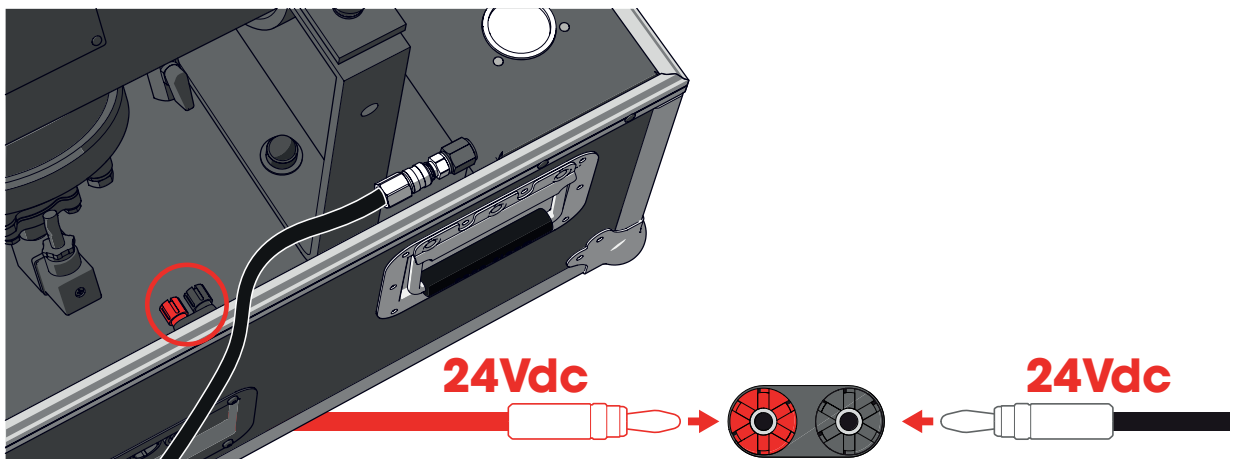

100-250Vac

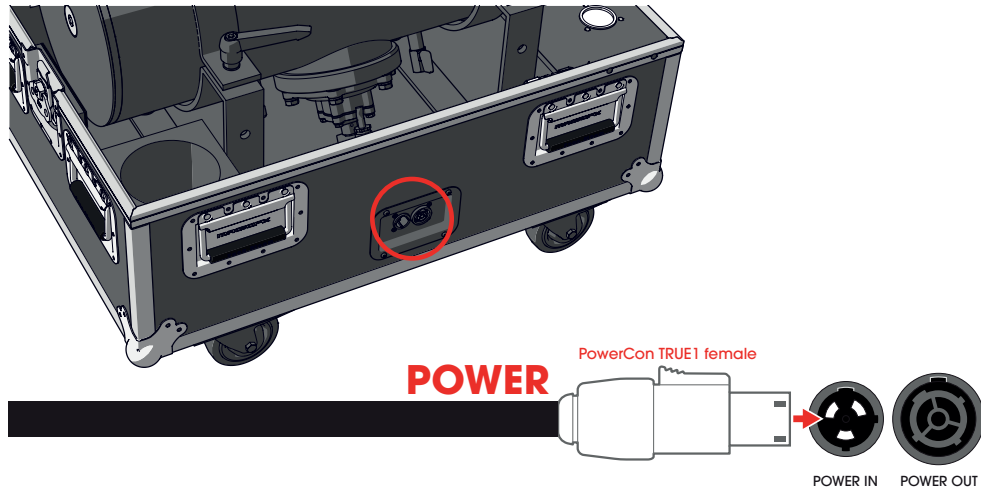

- 3 Connect the other end(s) to your controller or power switch.
- 4 Optionally connect another machine to the power output with a power link cable (100-250 Vac only).

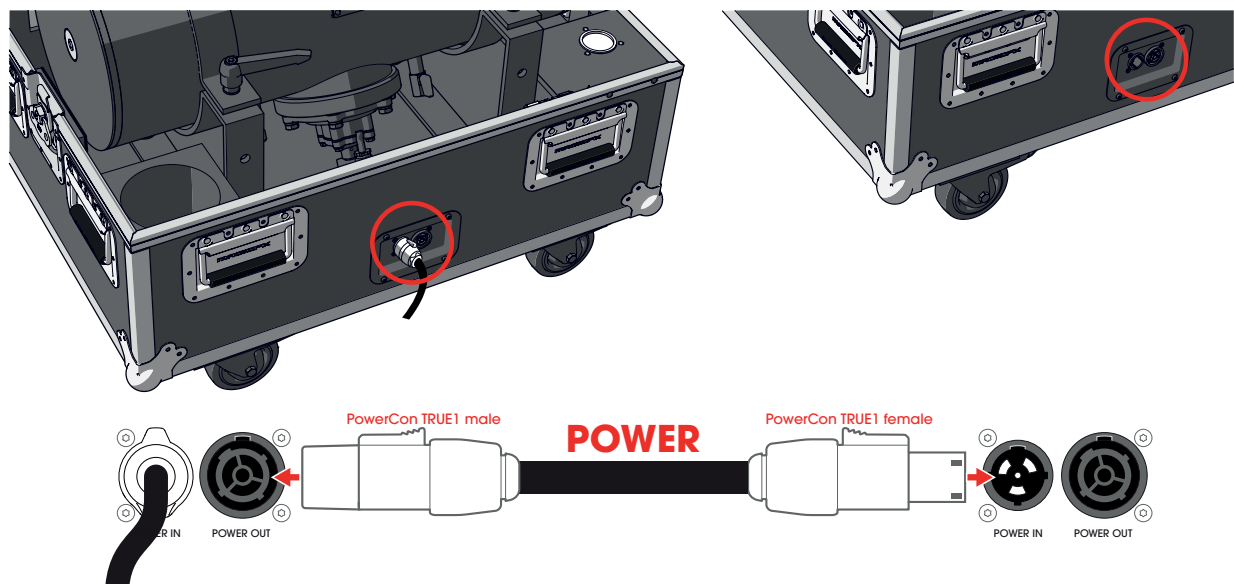

⚠ CAUTION

Do not connect more units to a single electrical circuit than the installed fuse is able to handle. (Calculate the summed load with the electrical data from Chapter 1)


3.3 RUN A TEST

- 1 Make sure that the pressure level is zero by checking the tank pressure meter. If necessary depressurize the system by opening the ventilation valve.
 - 2 Switch the power on and check if
 1. the LED power indicator lights up;
 2. you hear a click sound.
 - 3 If desired run a test with pressure. Follow the step from Section 3.5 and 3.6.
-

3.4 FILL WITH CONFETTI AND/OR STREAMERS


- 1 Make sure that the machine is functioning correctly by running a test first, see Section 3.3.
- 2 Make sure that the pressure level is zero by checking the tank pressure meter. If necessary depressurize the system by opening the ventilation valve.
- 3 Place a lifting core in the bottom of the output pipe.

Make sure the lifting core lies flat and closes off the hole in the output pipe!

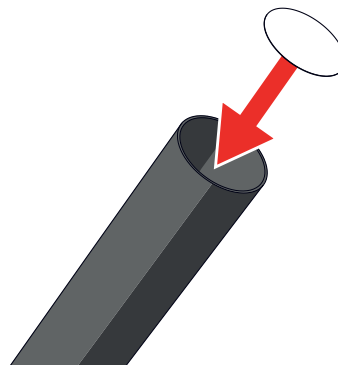


- 4 Fill the output pipe with confetti and/or streamers.

Check Chapter 1 for the maximum amount per approved type of input.

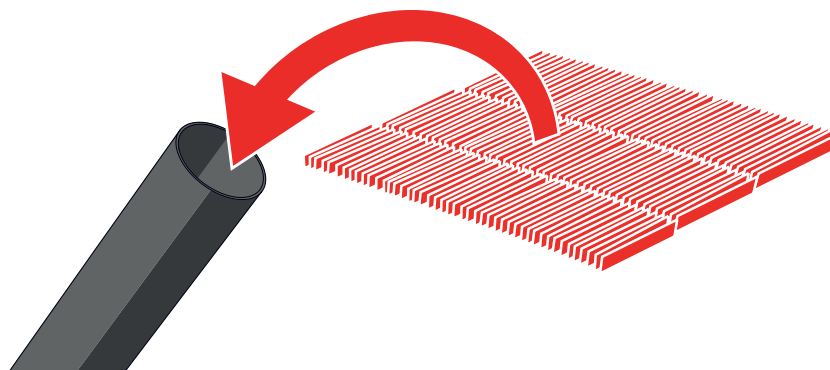

-
- 5** Place a pressure cap on top of the output pipe.

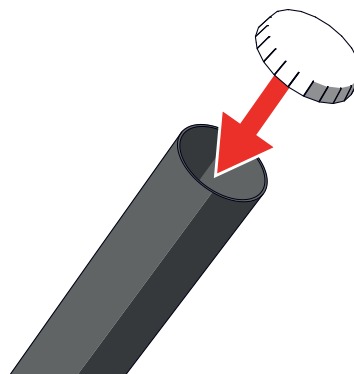


-
- 6** Secure the pressure cap to the output pipe with special pressure cap tape.



3.5 FILL WITH PRESSURIZED AIR

-
- 1** Connect the hose from an air compressor to the air coupling.

Only use a compressor with a maximum output of 8 bar. The end of the hose must be fitted with a quick-connect coupling.

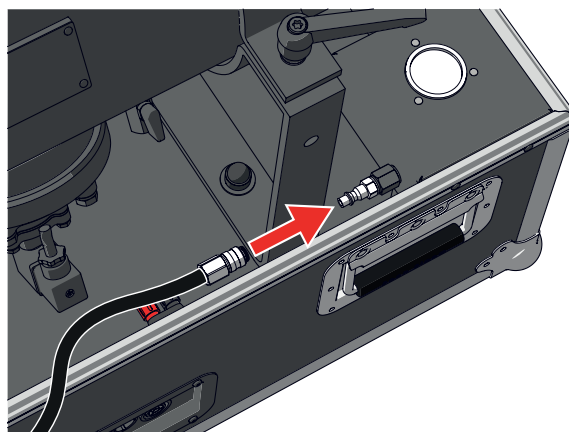

-
- 2** Switch on the air compressor and fill the tank to a maximum pressure of 8 bar.

-
- 3** In case you do not want the compressor to refill the tank after the shot: Switch off the compressor and disconnect the hose.
-

3.6 LET'S SHOOT!

1. Make sure that the prescribed safety zone is free from persons and objects.
 2. When it's time to shoot, switch the power on.
 3. Enjoy the view!
-




-
4. Switch the power off.


3.7 CLEAN UP

-
- 1 Disconnect the power cable(s).
-



- 2 Disconnect the compressor hose from the air coupling (if not done already).

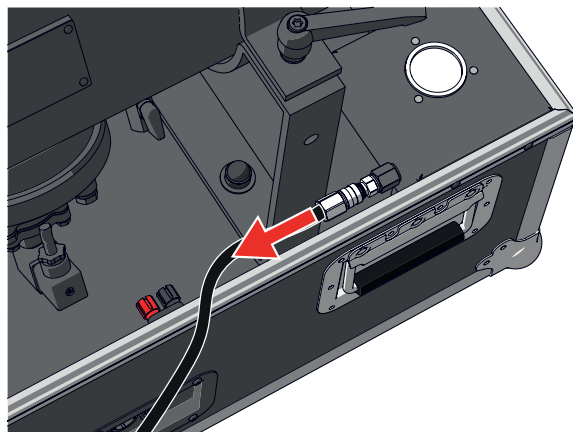


-
- 3** Open the ventilation valve to remove any remaining air from the tank.

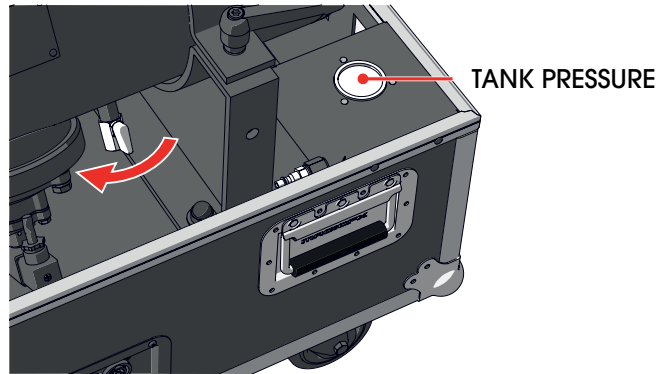


-
- 4** Pull the locking clamps downwards to unlock and rotate them upwards.

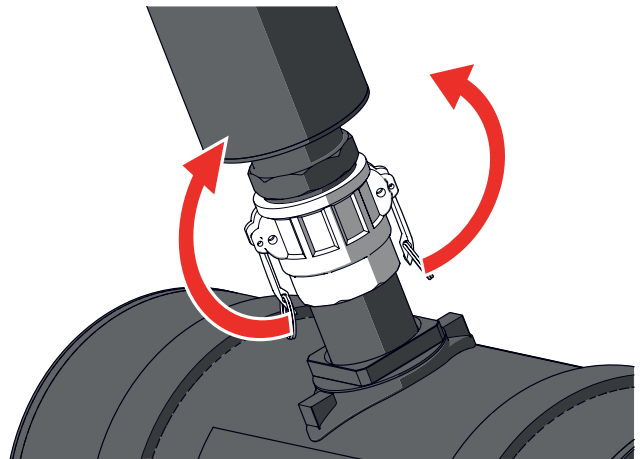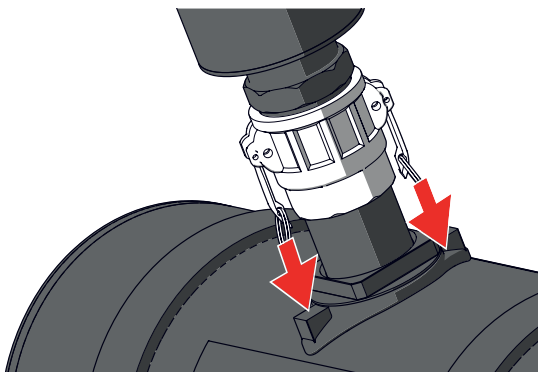


-
- 5** Remove the output pipe from the coupling.

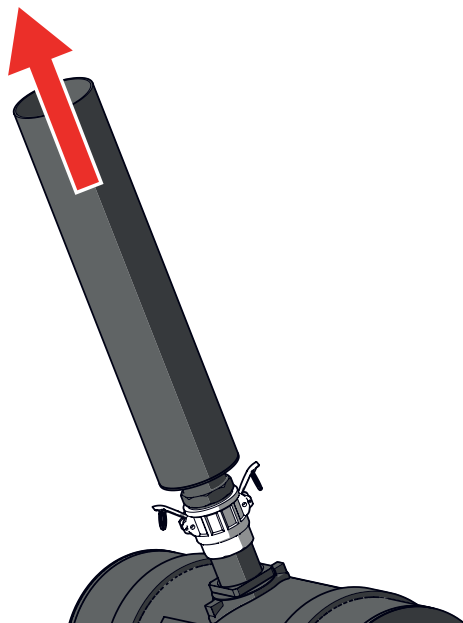


-
- 6 Store the output pipe in the flight case.

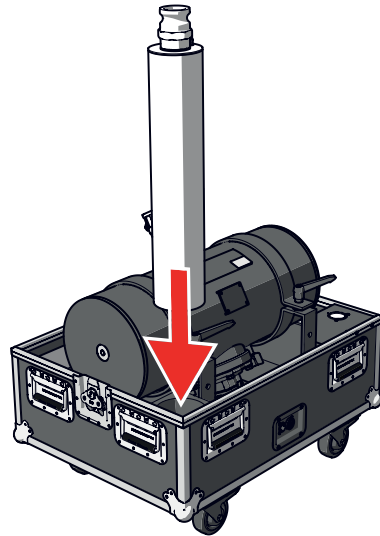

-
- 7 Place and lock the top cover.

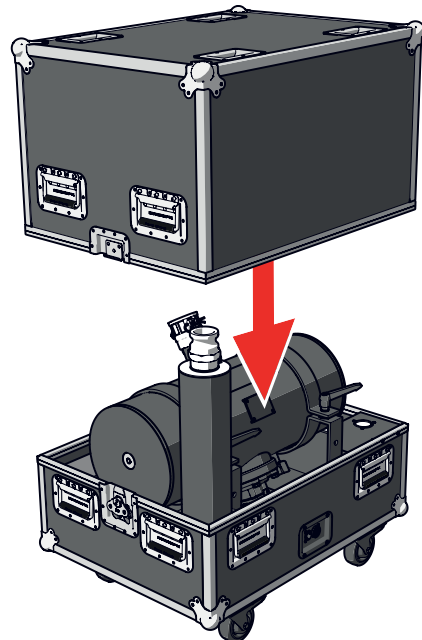

-
- 8 Release the brakes.

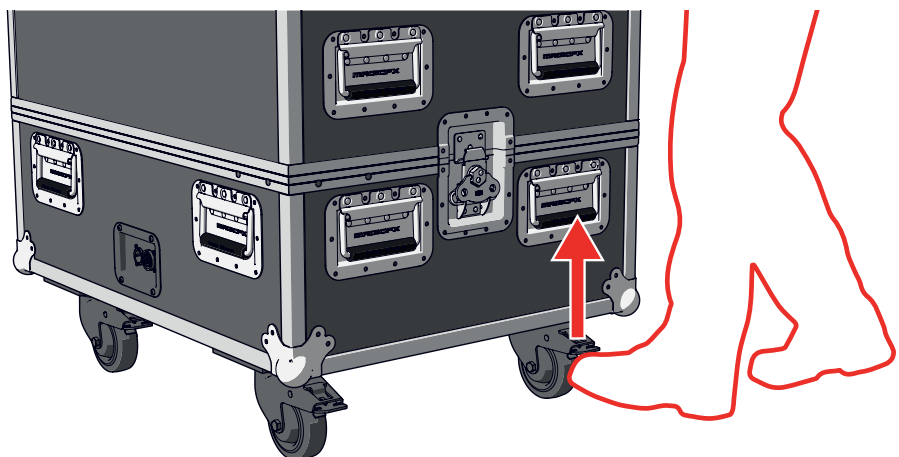

4 MAINTENANCE

To achieve the maximum service life of the machine you must regularly clean the machine and test if it is functioning correctly.

Contact MAGIC FX if the machine is not functioning correctly.

⚠ DANGER

Do not replace parts yourself; always consult MAGIC FX.

5 TROUBLESHOOTING

Always contact MAGIC FX if any malfunctions or errors occur that cannot be solved with the instructions as described in this manual.

6 CORRECT DISPOSAL



This symbol on the product and / or accompanying documents means that used electrical and electronic products (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points where it will be accepted free of charge.

Alternatively, in some countries you may be able to return your products to your local retailer upon purchase of an equivalent new product.

Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling.

Please contact your local authority for further details of your nearest designated collection point.

Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.

7 EC DECLARATION OF CONFORMITY

According to Annex III A Low Voltage Directive 2014/35/EU + Machinery Directive 2006/42/EC

MAGIC FX B.V. declares as manufacturer and composer of the technical construction file that the product with the following specifications:

| | |
|-----------------------|---|
| Name machine | : STAGESHOT II / STADIUMSHOT II / X-TREMESHOT |
| Type | : MFX0410II / MFX0401II / MFX0414 |
| Voltage | : 100-250Vac/12-24Vdc |
| Max. Working Pressure | : 8 bar / 116 psi |
| Volume | : 17,7L / 36L / 68L |
| Serial number | : on product |
| Year of construction | : on product |

Is in conformity with the minimal safety regulations as stated in the following directive(s):

- EMC (2014/30/EC) ElectroMagnetic Compatibility
- RoHS (2011/65/EU) Restriction of the use of certain Hazardous Substances
- WEEE (2012/19/EU) Waste Electrical & Electronic Equipment
- PED (2014/68/EU) Pressure Equipment

The following harmonized standards were applied:

- NEN-EN-ISO 12100:2010, Safety of machinery - General principles for design - Risk assessment and risk reduction.
- NEN-EN-IEC 60204:2010, Safety of machinery - Electrical equipment of machines - Part 1: General requirements.
- NEN-EN-IEC 61000-6-3:2007/A1:2011, Electromagnetic compatibility (EMC) - Part 6-3: Generic standards - Emission standard for residential, commercial and light-industrial environments.
- NEN-EN 13445-1:2016, Unfired pressure vessels.

☐ Original declaration of conformity


☒ Translation of the original declaration of conformity

| | |
|-------------------|----------------------------------|
| Name manufacturer | : MAGIC FX BV |
| Address | : Schouwrooij 27, 5281 RE BOXTEL |
| Country | : The Netherlands |

| | |
|------|--------------|
| CEO | : B. Veroude |
| Date | : 6-10-2017 |

Signature

:

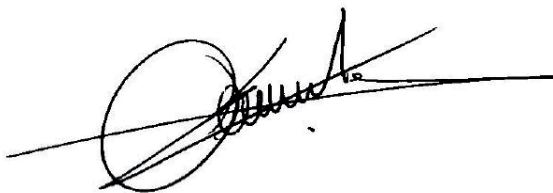

MAG:CFX[®]
WWW.MAGICFX.EU

